

Installation Instructions

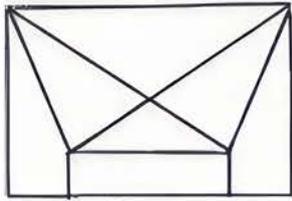


Fig.1

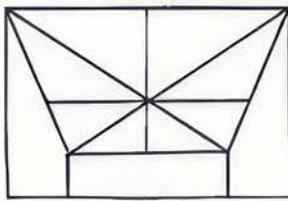


Fig.2

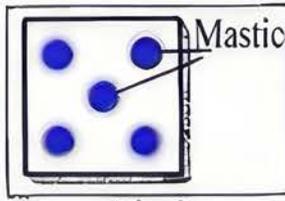


Fig.3

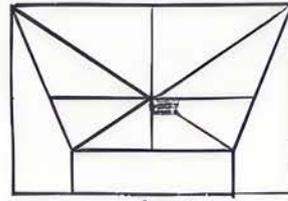


Fig.4

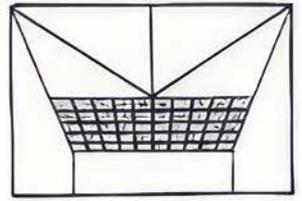


Fig.5

Do NOT apply tiles over soft or unstable popcorn. If the popcorn is loose, it must be removed first. Soak it with water and scrub it off.

The ceiling surface must be stable. If it's loose or chalky, apply a primer before tiling.

Clean the ceiling thoroughly: remove dust, grease, wax, old flaky paint, and dirt.

Fill any cracks or flaws with filler, gypsum, or mortar.

You will need: **Utility knife, Adhesive (mastic), Caulk & caulking gun, Sponge, Gloves (optional).**

Step 1. Find the Center of the Ceiling

Start in the middle of the ceiling for an even layout.

Use two strings stretched diagonally (corner to corner) to find the center (see Figure 1).

Mark two perpendicular lines through this point to divide the ceiling into four equal sections (see Figure 2).

Smooth tile edges with a file if needed.

Step 2. Apply Mastic to the Tile

On the back of each tile, apply mastic in ½-1 inch thick mounds (see Figure 3).

Place mastic near the corners, in the middle, and a few extra spots if needed.

The mastic should form small "hills" (not spread flat).

For porous surfaces (like popcorn), use more mastic. For flat surfaces, use less.

Step 3. Install the First Tile

Position the first tile so one corner sits exactly at the ceiling center you marked earlier (see Figure 4).

Align its edges with the perpendicular lines.

Step 4. Press to Adhere

Press tiles firmly against the ceiling so the mastic spreads and bonds.

Apply enough pressure for adhesion but avoid damaging the tiles.

Step 5. Continue in Parallel Rows

Lay the rest of the tiles in straight, parallel rows (see Figure 5).

Push tiles tightly together to avoid gaps.

Step 6. Apply Caulk

Once all tiles are installed, caulk the seams.

Even if seams are barely visible, caulking makes the ceiling look seamless.

Use clear or matching-color caulk.

Apply a thin bead along each joint, press it in with your finger, then wipe off the excess with a damp sponge.

Rinse the sponge often so it stays clean.

Don't let caulk dry on the tile surface - it becomes hard to remove.

Scan the code
for installation videos



Adhesive we recommend:

AcrylPro
Professional
Tile Adhesive



OR

Loctite
Power Grab
All Purpose



CAUTION
USE
WATER-BASED
PAINT ONLY!